

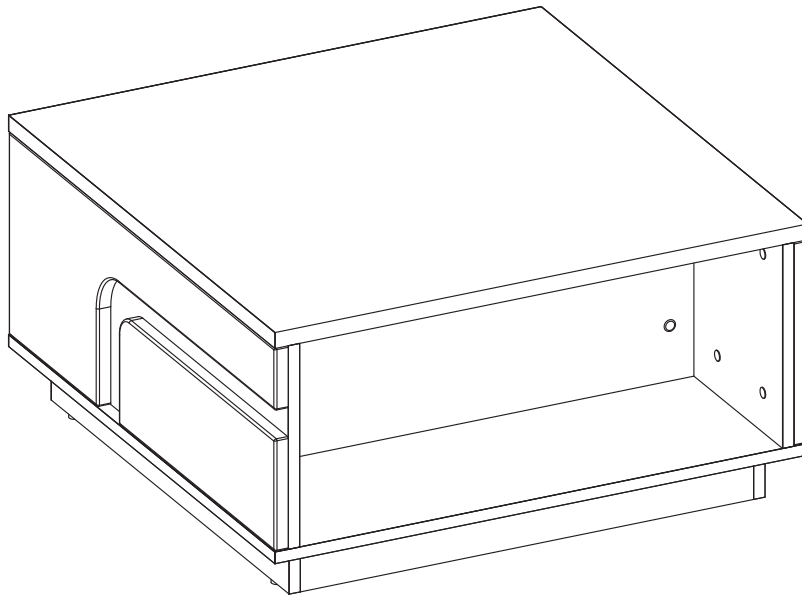
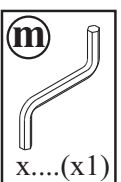
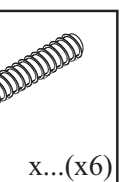
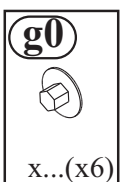
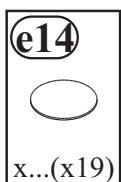
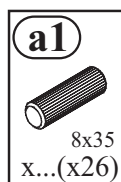
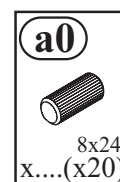


INSTRUKCJA MONTAŻU / NÁVOD NA POUŽITÍ / MONTÁŽNÍ INSTRUKCE
ИНСТРУКЦИЯ ПО СБОРКЕ / SZERELÉSI ÚTMUTATÓ









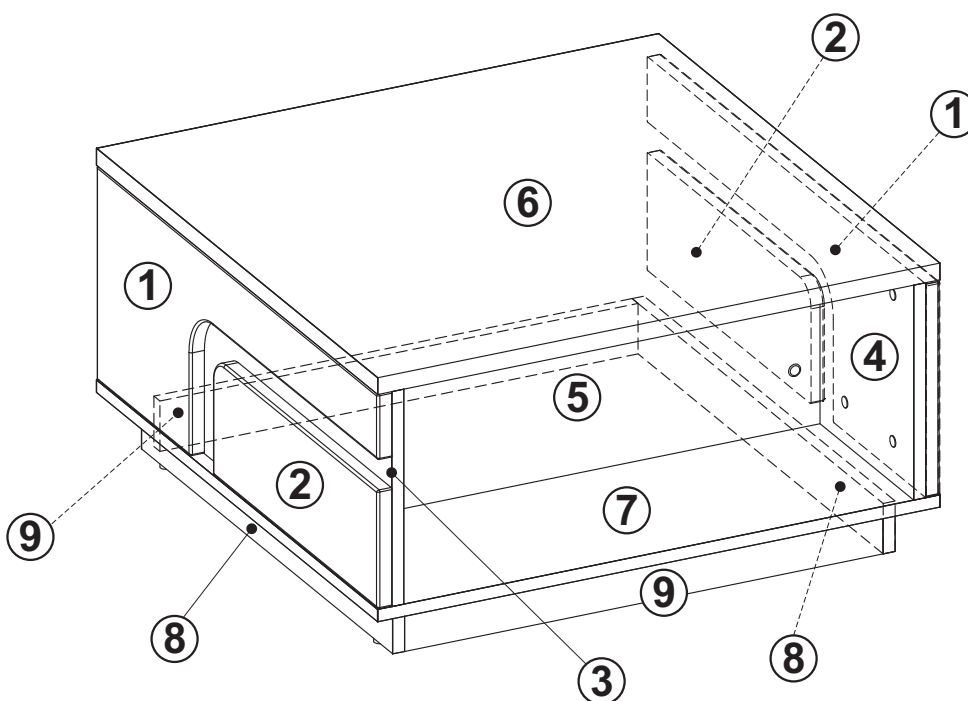


OKUCIA SĄ W PACZCE NR 1. / KOVANIE KTORÉ SA NÁCHADZA V SKRINKE NR 1.
KOVÁNÍ OBSAŽENÉ V BALENÍ NR 1. / ФУРНИТУРА, НАХОДЯЩАЯСЯ В УПАКОВКЕ NR 1.
A CSOMAGBAN TALÁLHATÓ BÚTORSZERELVÉNYEK NR 1.

INSTRUKCJA MONTAŻU / NÁVOD NA POUŽITIE / MONTÁŽNÍ INSTRUKCE
 ИНСТРУКЦИЯ ПО СБОРКЕ / SZERELÉSI ÚTMUTATÓ

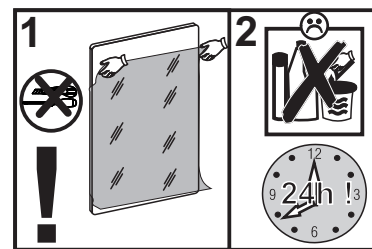


1

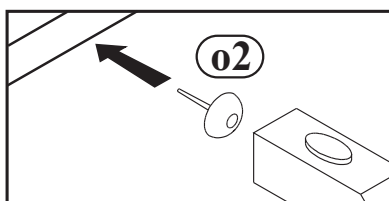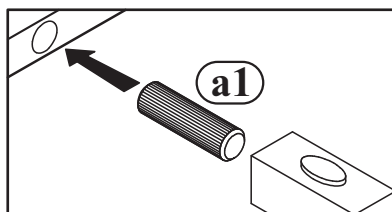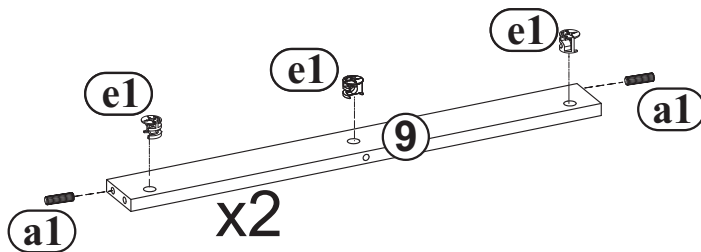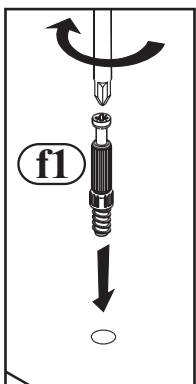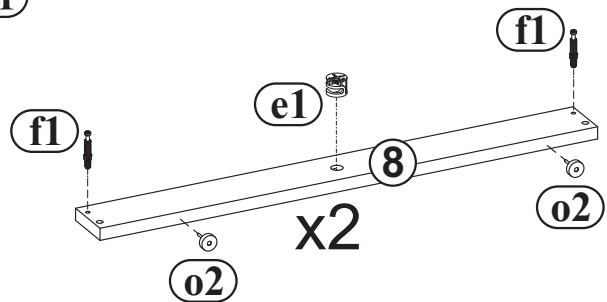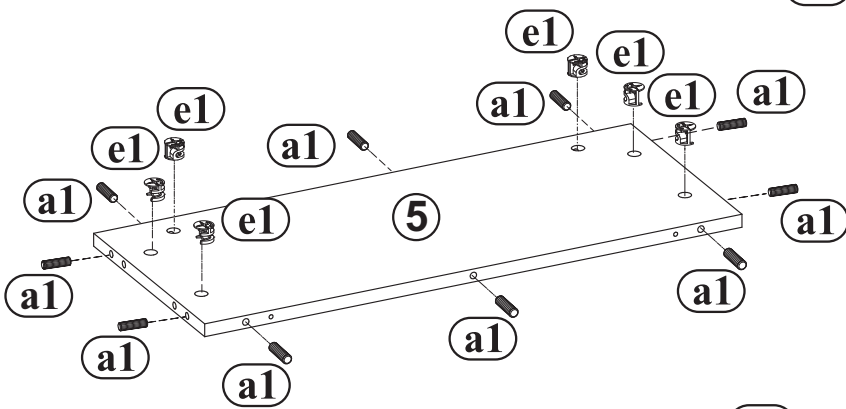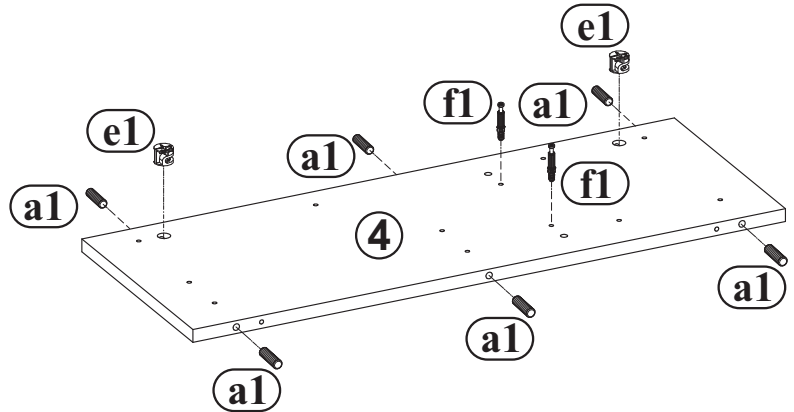
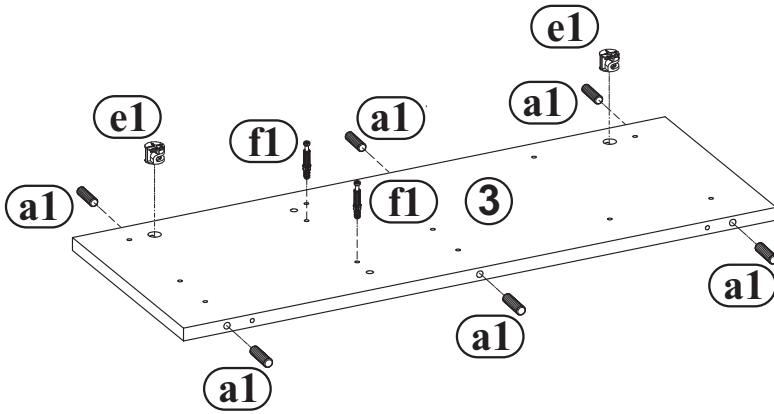
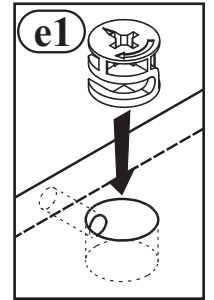


 8x35 x26	 x18	 x8	 x4
-----------------	---------	--------	--------







2

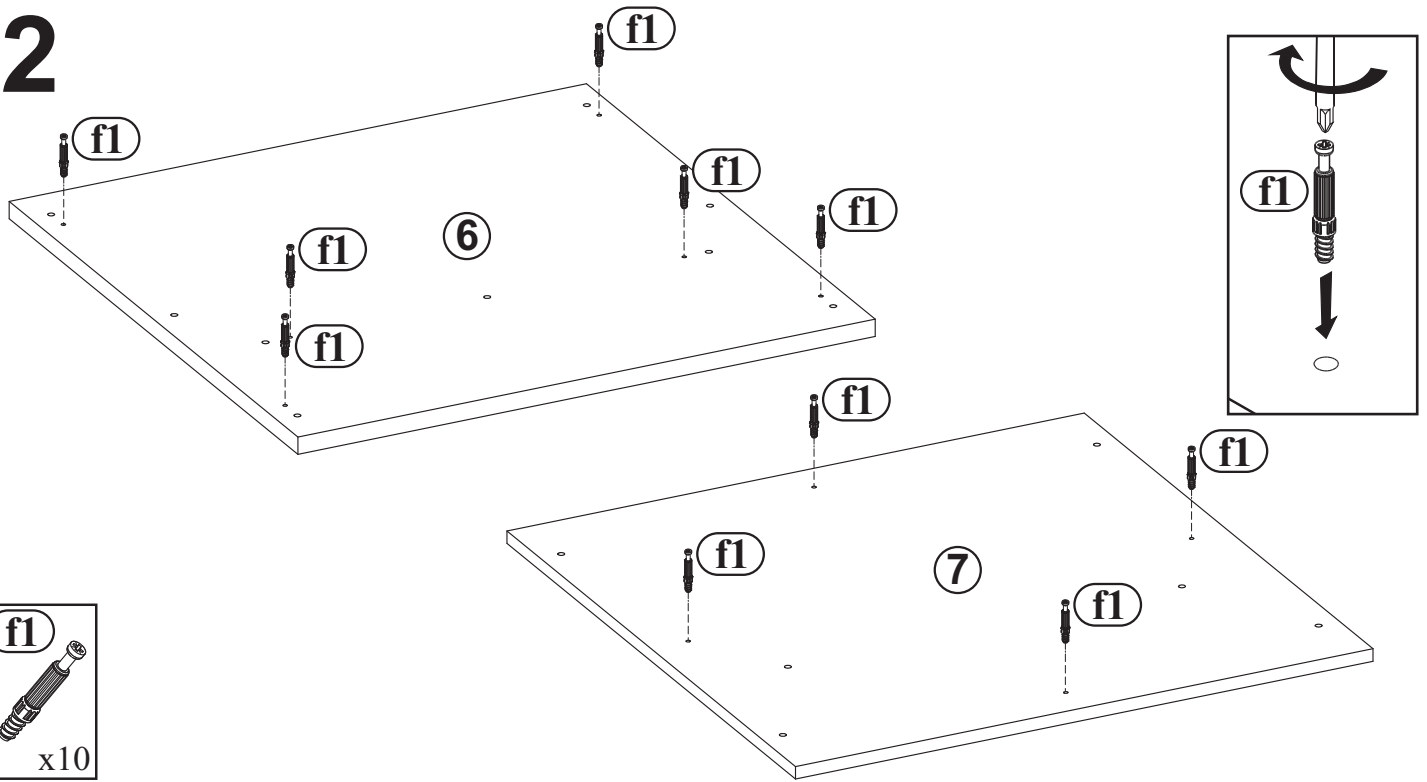








3

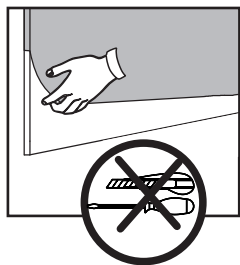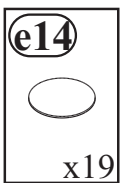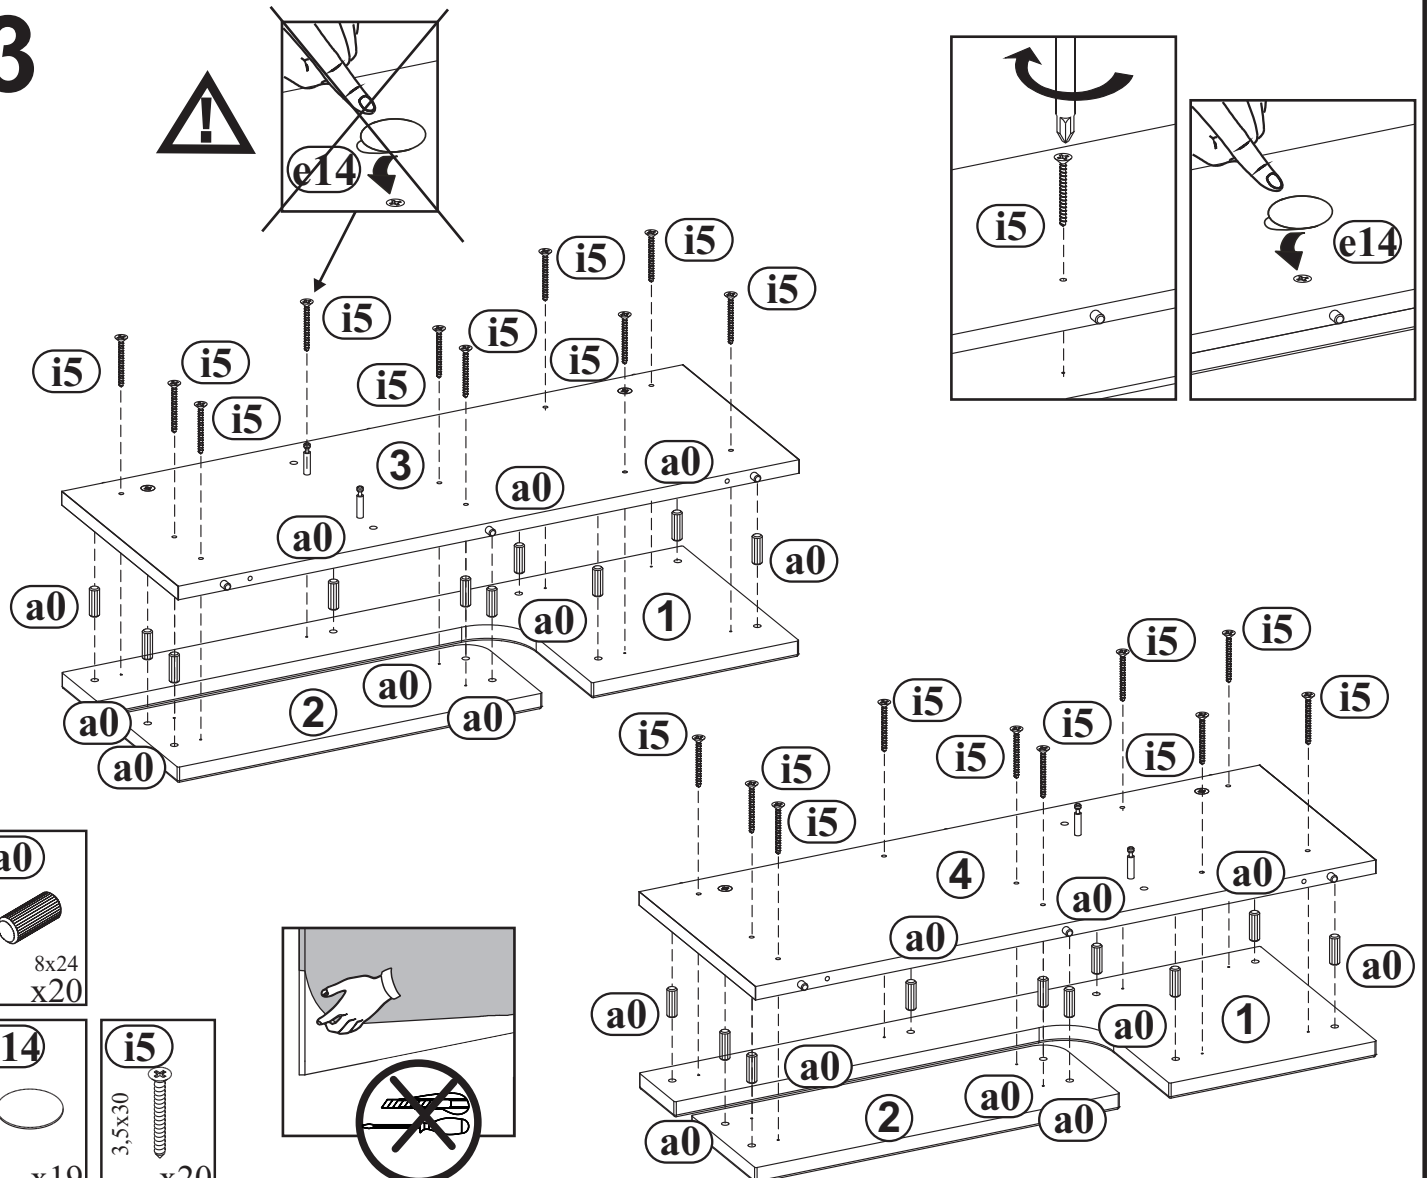





4

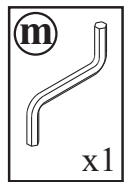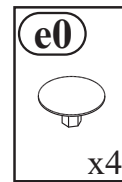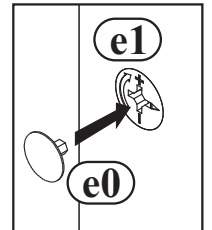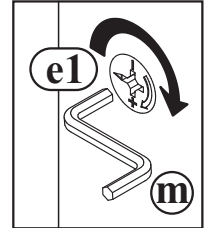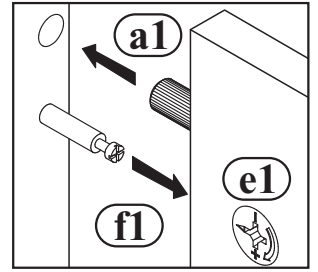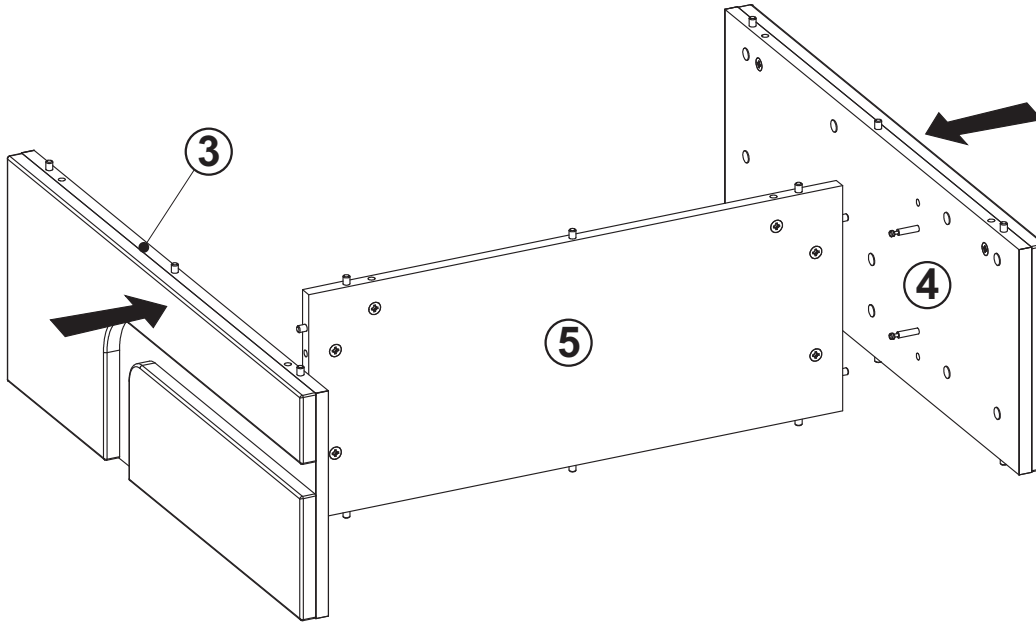






5

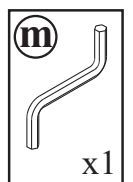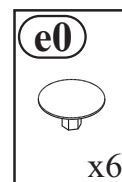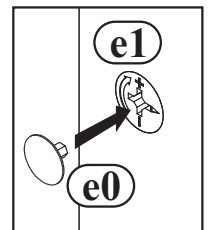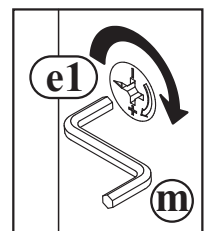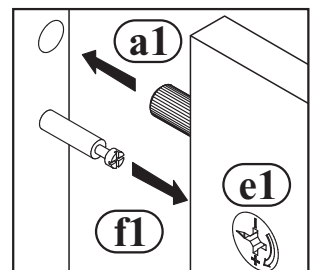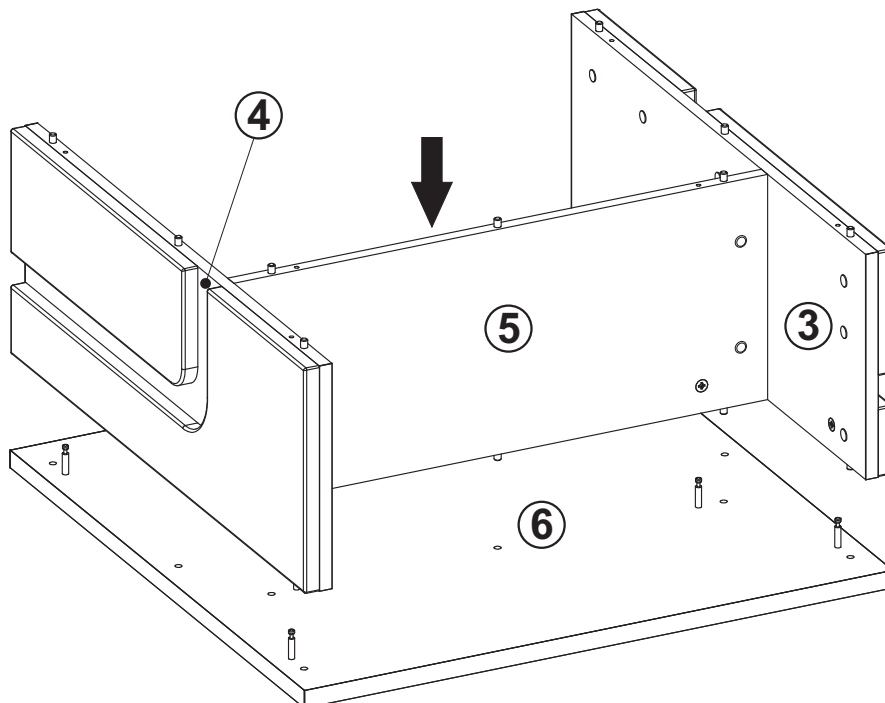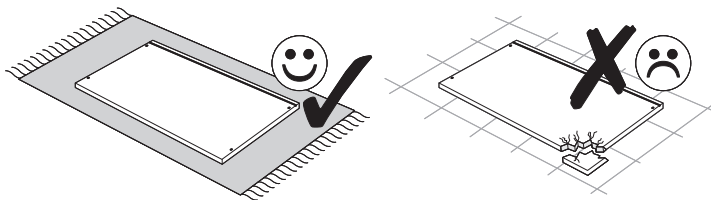







6

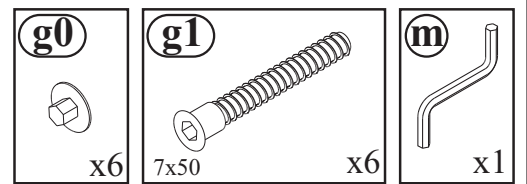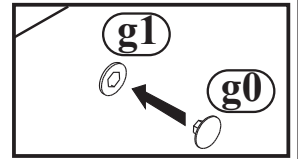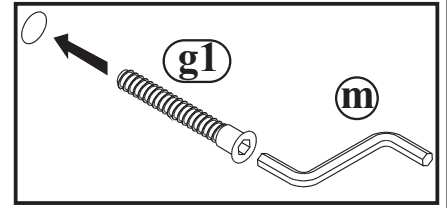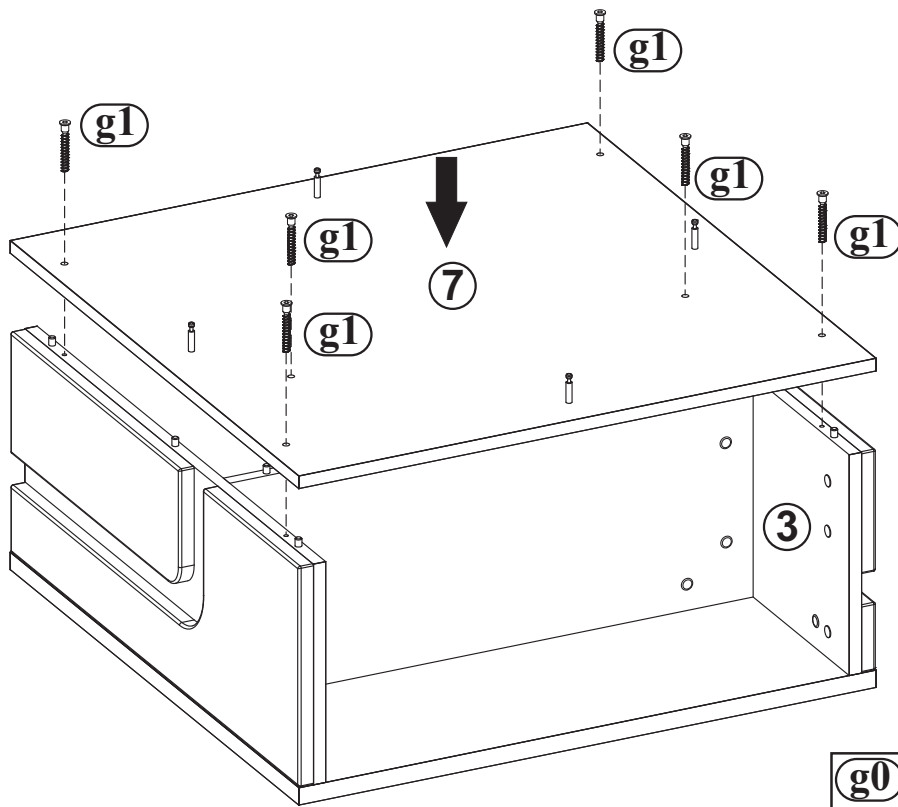

7

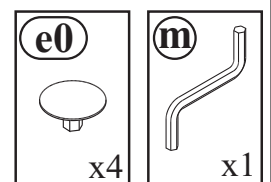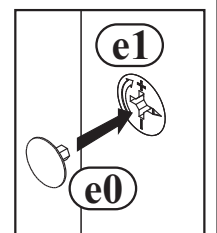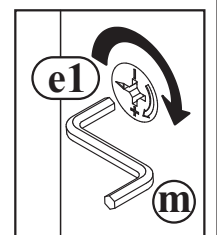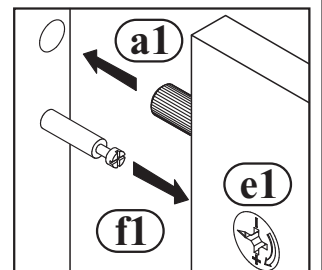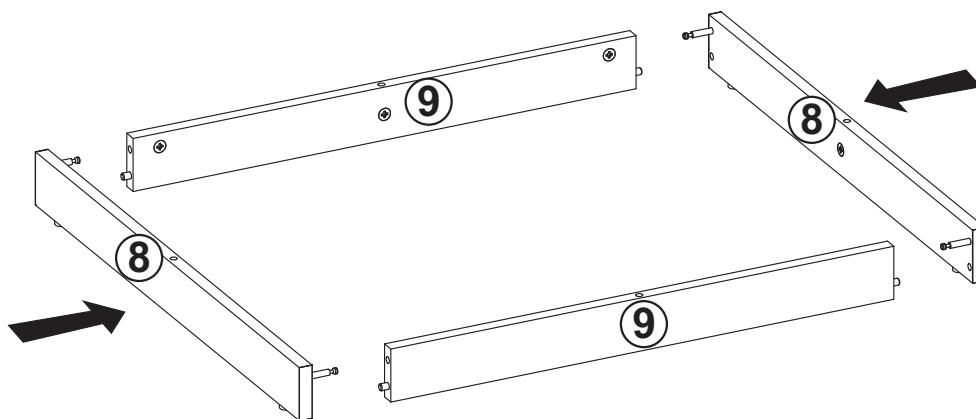

8

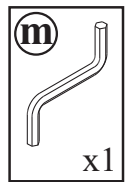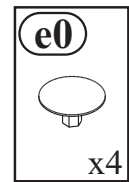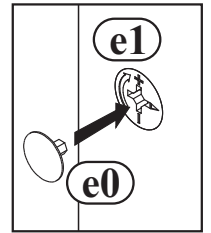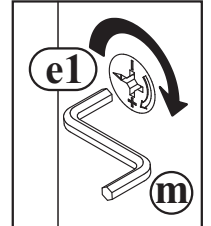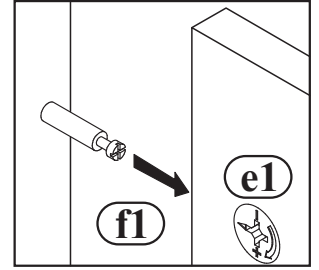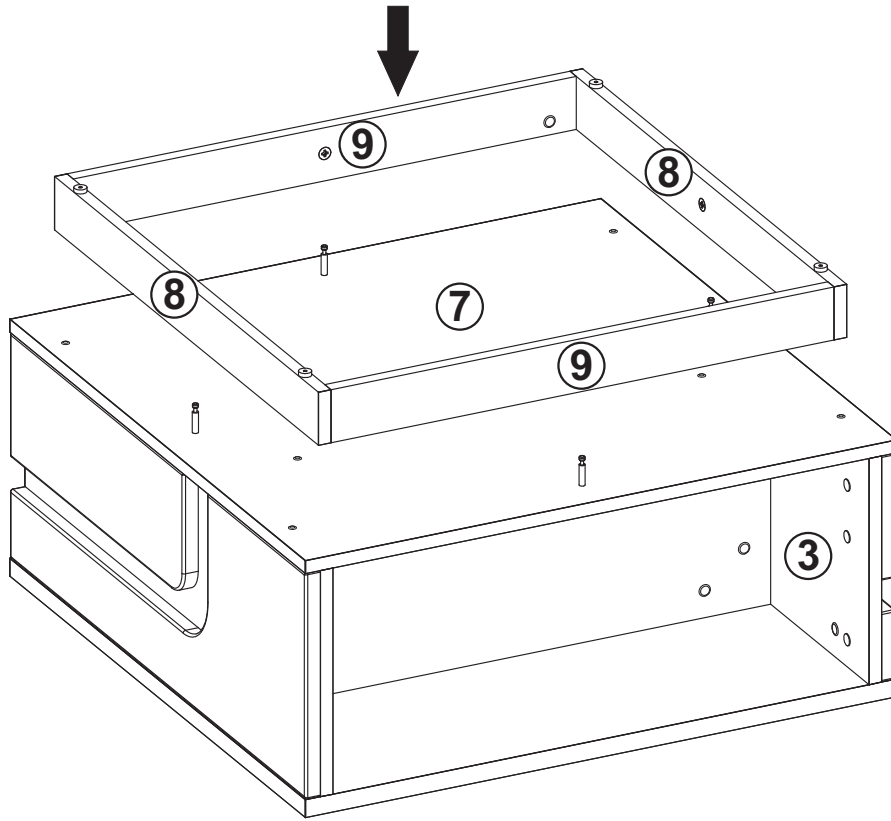

9

